



Assembly Guide for Standard Bay

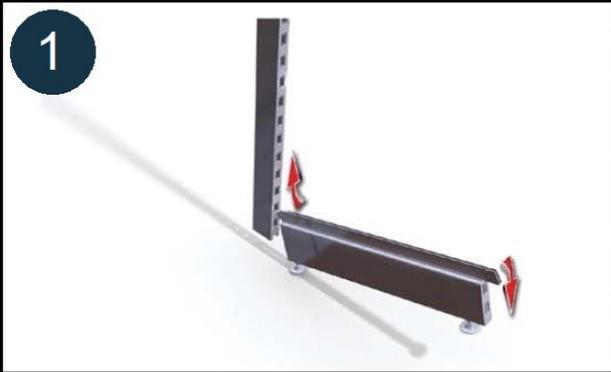

1
Locate the baseleg rear lug and block into the bottom "H Slots" of the upright as shown.

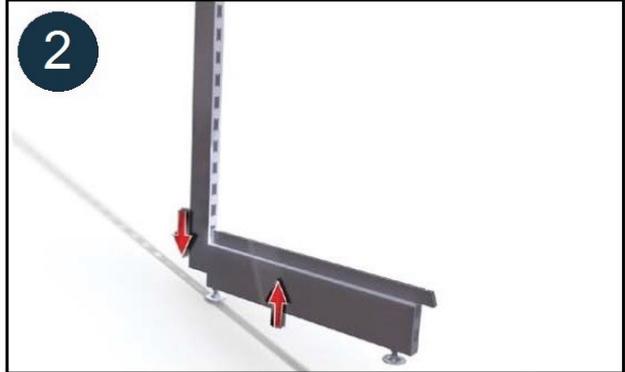


2
Using a rubber mallet, firmly knock the baseleg upwards locking it into position until flush.




3
Repeat steps 1 and 2 until you have two "L" shaped uprights.



4
Connect both "L" shaped uprights together by fitting a back panel into the bottom "H" slots of the uprights. Now check levels are correct by adjusting the foot discs as required.

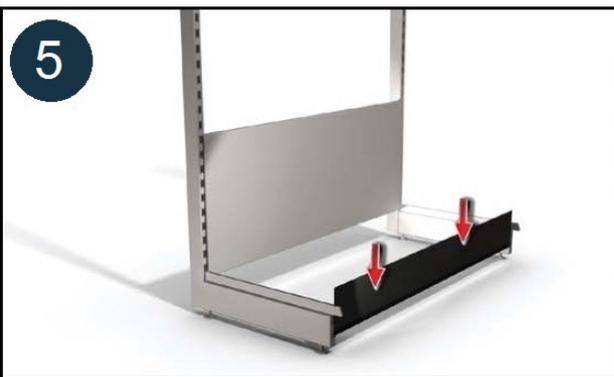

5
Fit the plinth skirting into position by slotting it between the front capping on the baselegs.

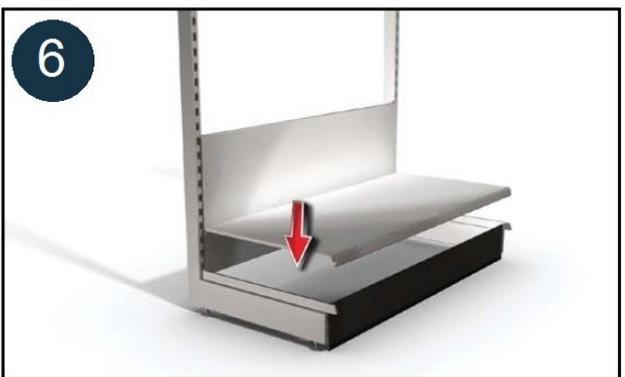

6
Fit the base shelf onto the baseleg runners. Now fit all remaining back panels.

Assembly Guide for Standard Bay



Once the base shelf and back panels are in place the bay should look as above. You are now ready to fit the upper shelves.



Insert a bracket into the upright "H" slot at an angle as shown above.



Rotate the bracket upwards until secured in a horizontal position. Brackets can also be positioned at sloping angles if desired.



Repeat step 8 on the opposite upright and then fit a matching shelf onto the pair of brackets



Repeat steps 8 - 10 until all the upper shelves are in position.



To finish, attach Epos ticket strips to the front of all shelves.